

FIELD OPERATIONAL MANAUL



A person wearing sunglasses is holding a green Silent Scope Light Rifle. The rifle has a red tip and a white light at the front. The background is dark.

SILENT SCOPE[®] LIGHT RIFLE



Silent Scope® Light Rifle - PL-2038 - Rev#121703

Table of Contents

Console Protection Guarantee	1
Product Overview	2
Dual Functionality	2
Pump Action Reload Slider	2
Kickback Function	2
Scope Sensor	3
Gun Modes	3
HDTV Support	3
Product Layout	4
Instructions	5
Assembling the Rifle	5
Assembling the Shotgun	5
Disassembling the Rifle	6
Calibration	7
Using the Scope Sensor	9
Using the Kickback Feature	10
Using the D-pad (directional pad)	10
Gun Modes	11
HDTV Support	12
Trouble Shooting	13
Important Notice	15
Warranty Information	16
Proof of Purchase	17



PELICAN
Performance you can trust

Console Protection Guarantee

**Console Protection
GUARANTEE**

Pelican's Console Protection Guarantee assures you of Pelican's commitment to quality and customer satisfaction. The Protection Guarantee warrants the connection (the plug port of the video game console and the plug of the Pelican controller) between the controller and your video game console system, i.e., that with the proper use of our controller (see manual) we agree to replace or repair your video game system in the event that our controller directly causes damage to your game console as a result of our controller failing to perform properly. Circumstances that may cause our protection guarantee to take effect might be one of the following: the video game console does not acknowledge a controller which has been plugged in, original controller fails to operate after using a Pelican controller, other non-pad controllers fail to operate after using a Pelican Controller. This protection warranty does not include the video game power supply, any part relating to the CD/DVD load and read mechanism, internal operating system, nor the cabinet of the video game system. This warranty will not apply if the Pelican controller is not used as directed in the product manual enclosed. For further information or help please contact us toll free at:

(800) 331-3844

<http://www.pelicanperformance.com>

Product Overview

Silent Scope® Light Rifle was developed specifically to give you an enhanced gaming experience when playing Silent Scope Complete™. There are a few switches, buttons, and features not found on your basic Xbox Controller. The following is an explanation of these elements.

Dual Functionality:

Silent Scope® Light Rifle was designed to be the ultimate Light Gun Accessory. The Barrel, Scope, and Stock are detachable so that the Silent Scope® Light Rifle transforms into a Pump Action Shotgun!

Pump Action Reloader:

A Pump Action Reloader has been added to give you the ultimate game experience when you are using the Silent Scope® Light Rifle in its Shotgun form.

Linear Kickback Function:

Silent Scope® Light Rifle includes a realistic Linear Kickback feature that allows you to feel the recoil of every shot fired!

Scope Sensor:

Silent Scope Complete™ is a light gun compatible game... but to activate the scope you have to press and hold a button when you want to be zoomed in to target your enemy. The Silent Scope® Light Rifle has a feature to activate the scope by just simply moving your head and looking into the scope of the rifle. So once you place your head behind the scope the game automatically has the screen zoomed in as long as you are looking through the scope. If you are not looking into the scope the game will keep the screen normal with no zoom. See page 9 for more information.

Gun Modes:

 
Silent Scope® Light Rifle includes 4 different gun modes; Normal, Auto Reload, Burst, and Auto Fire / Auto Reload. See page 11 for more information.

HDTV Support:


HDTV support has been added to the Silent Scope® Light Rifle to further enhance your gaming experience. For the most up to date TV compatibility please visit us at www.pelicanperformance.com

Product Layout

Silent Scope® Light Rifle (Rifle Form)

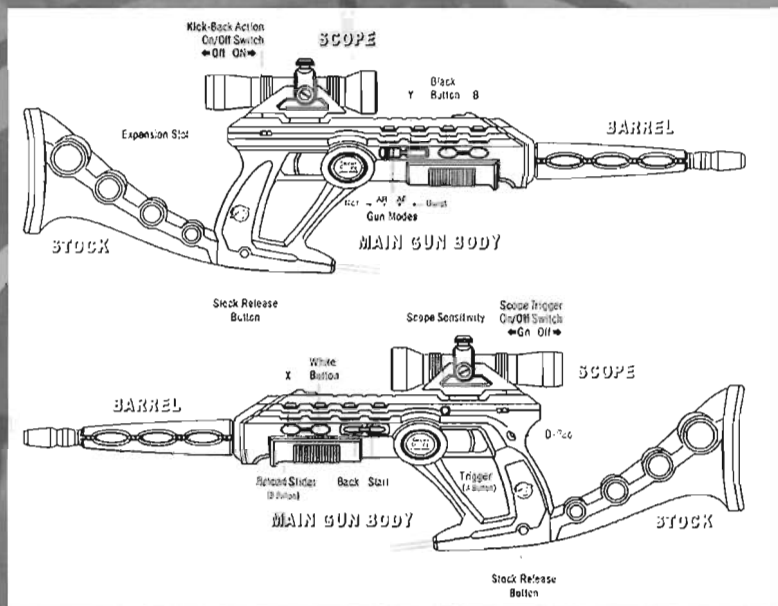

 Silent Scope® Light Rifle (Shotgun Form)

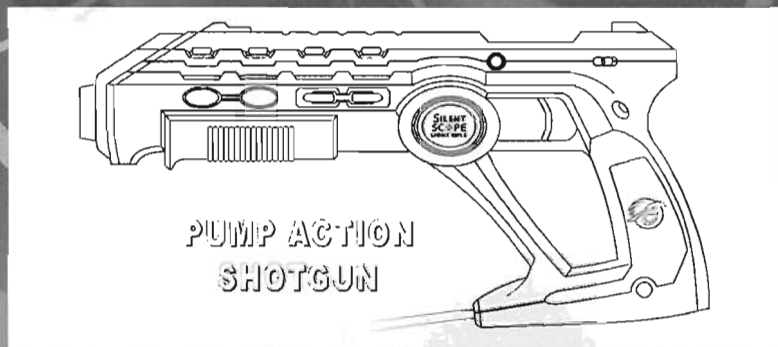

4.

Instructions For Rifle Assembly:

Thank you for purchasing the Silent Scope® Light Rifle. When using the Silent Scope® Light Rifle in its rifle mode there is some easy assembly required. Below is a brief explanation of how to assemble the rifle:

1. Remove the main gun body and scope from the upper tray of the box.
2. Under the main gun body you will find the barrel and stock.
3. Insert the barrel into the front of the main body. the black bubbles should be facing up. Now rotate the barrel in a clock wise motion. Make sure that the barrel is firmly attached. Please do not apply excessive force.
4. Next locate the hole at the back of the main gun body at the bottom of the handle. Insert the Stock into this hole with the black portion of the stock facing down until you feel a click. Please do not apply excessive force.
5. The last step of assembly is to attach the scope. You will notice a slot on the top surface of the main gun body, slip open the door. Insert the scope into this slot with the larger diameter end of the scope facing towards the front of the gun.

NOTE: You must calibrate the light rifle before you attach the scope. For more information please see page 06.

Shotgun Assembly:

When you want to use the Silent Scope® Light Rifle as a shotgun there is no special assembly required.

5.

Disassembling the Rifle:

Below is a brief description on how to disassemble the Silent Scope® Light Rifle:

1. Remove the Scope from the main gun body lifting it straight up.
2. The barrel can be removed by rotating it counter clockwise until it releases.
3. When removing the Stock, place the rifle under your arm upside down with the stock pointing away from you.
4. This will make the bottom of the handle face up towards you. With one of your hands press the release buttons located on each side of the handle with your thumb and index finger.
5. With the release buttons pressed use your other hand to pull the stock straight away from you until it comes out of the main gun body.

Calibration:

When you start Silent Scope Complete™ and have not calibrated your Silent Scope® Light Rifle or any other light gun, a calibration screen will automatically come up.

1. Make sure the Gun Mode is set to normal.
2. Turn the Scope sensor switch to the off position.
3. Aim at the target and pull the trigger.
4. A second target will appear. Aim at the target and pull the trigger again.

After you have pulled the trigger at the second target a new screen will come up that has a large black square in the center of the screen.

5. Pan the gun left and right moving the cursor across the black square.
6. If you notice the cursor delay as it moves in and out of the black square, you will need to adjust the brightness up.
7. Press the D-pad right to increase the brightness. Keep adjusting it until the cursor moves smoothly across the black square.
8. Pull the Trigger once you are finished adjusting the brightness.
9. The Silent Scope® Light Rifle is now calibrated.

NOTE: Not all games calibrate the Silent Scope® Light Rifle in the same way. If you are having trouble please refer to the game instruction manual for details on Calibration. Make sure you follow steps 1 and 2.

If you have already calibrated a different light gun with Silent Scope Complete™ the calibration is stored in the game save and it will automatically be loaded. Follow these steps to recalibrate the game for use with the Silent Scope® Light Rifle.

1. Make sure the Gun Mode is set to normal.
2. Turn the Scope sensor switch to the off position.
3. Start the game. Once the game has begun press the Start Button to bring up the menu.
4. Select the Calibration option and the calibration screen will come up.
5. Aim at the target and pull the trigger.
6. A second target will appear. Aim at the target and pull the trigger again.

After you have pulled the trigger at the second target a new screen will come up that has a large black square in the center of the screen.

7. Pan the gun left and right moving the cursor across the black square.
8. If you notice the curser delay as it moves in and out of the black square, you will need to adjust the brightness up.
9. Press the D-pad right to increase the brightness. Keep adjusting it until the cursor moves smoothly across the black square.
10. Pull the Trigger once you are finished adjusting the brightness.
11. The Silent Scope® Light Rifle is now calibrated.

Using the Scope Sensor

The Silent Scope® Light Rifle has the unique ability to activate the scope for Silent Scope Complete™ with just a simple movement of your head. All you have to do is look into the scope and it will be activated automatically for you. Below are a few points to remember when using the Scope Sensor:

On / Off Switch

You can turn the scope sensor on or off with this switch. You should never calibrate the gun with the Scope Sensor on.

Adjusting Scope Sensor

The Silent Scope® Light Rifle gives you the ability to tune the scope to your liking.

NOTE: Do not adjust the Scope Sensor unless you are an advanced user. The default setting will work for most cases.

To adjust the scope sensor follow the steps below:

1. Start Silent Scope Complete™.
2. Make sure the Scope Sensor is in the ON position.
3. Move your head to look through the screen.
4. Slowly turn the Scope Sensor adjustment until you see the scope come up on the software.
5. Pull your head away and then look back into the scope to make sure that the scope on the screen goes up and down.
6. You are now ready to play using the Scope Sensor.

 
Using the Kick Back Feature

A linear Kickback feature has been added to the Silent Scope® Light Rifle to enhance the gaming experience.

The Kickback feature can be turned on or off via the ON / OFF switch on the right side of the gun.

Using the D-pad (directional pad)

The D-pad has been rotated 90 degrees to the left to give you a more natural position when using it.

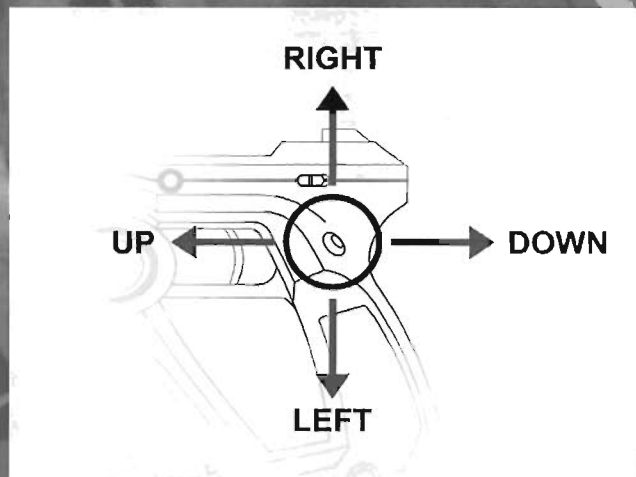

Gun Modes

The Silent Scope® Light Rifle has four different gun modes so you can set up the rifle to your liking.

Normal Mode

Normal Mode is the default setting for the Silent Scope® Light Rifle. If you pull the trigger it will fire once.

Auto Reload Mode

When the Silent Scope® Light Rifle is in the Auto Reload mode the game will automatically reload the bullets for you without having to press the reload button.

Burst Mode

Burst Mode will fire 3 shots every time you pull the trigger.

Auto Fire / Auto Reload Mode

The Auto Fire / Auto Reload Mode allows you to hold the trigger and the game will continuously turbo fire and reload automatically for you.

HDTV Support

The Silent Scope® Light Rifle supports most HDTVs. The Silent Scope® Light Rifle does not support all types of displays. It is not compatible with LCD (Liquid Crystal Display), monitors or projection TVs and some other displays. For more info on display compatibility please visit:

www.pelicanperformance.com

Trouble Shooting

If you are having difficulties with your Silent Scope® Light Rifle please refer below:

The Calibration Screen does not come up when I start Silent Scope Complete™.

1. The Xbox game console has already saved a calibration for a different gun. You can access the calibration while in the game by pressing start.
2. If the gun does not respond and you can't get into the game, plug a controller into controller port two and start the game. Press the start button on the Silent Scope® Light Rifle to access the calibration screen.

The Screen brightness adjustment screen does not come up while calibrating the gun.

1. Please check to verify that the Scope Sensor is in the off position.
2. Please check to verify that the Gun Mode is set to Normal.

The Kickback feature does not work.

1. Check to verify that the Kickback Switch is set to the ON position.

The Scope Sensor is not working.

1. Check to verify that the Scope Sensor is in the ON position.
2. Try adjusting the Scope Sensor. Please see page 9 for more information.

My Silent Scope® Light Rifle does not respond.

1. Check to verify that the Silent Scope® Light Rifle is plugged into controller port two.
2. Recalibrate the Silent Scope® Light Rifle. Please refer to page 7 for more information on calibration.



PELICAN
Performance you can trust

For technical questions please visit

<http://www.pelicanperformance.com>

or call us directly at 1 (800) 331-3844

IMPORTANT NOTICE



**Federal
Communications
Commission**

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.



PELICAN
Performance you can trust

**1840 East 27th Street
Vernon, CA 90058 USA**

<http://www.pelicanperformance.com>

Warranty Card

Pelican warrants to the original consumer purchaser that the product will be free from defects in materials and / or workmanship for a period of 5 years from the date of purchase. If a defect covered by this warranty occurs during this period, Pelican at its option will repair or replace, at no charge, any part that Pelican determines to be defective.

To obtain warranty service during the warranty period, send the defective product postage pre-paid, with a money order for \$4.00 to cover the return postage and handling, along with proof of purchase and the date of purchase to:



PELICAN

Performance you can trust

1840 East 27th Street
Vernon, CA 90058 USA

This warranty shall not apply if the product has been damaged by abuse, misuses, negligence, accident, modification, tampering or by any other causes unrelated to defective materials and / or workmanship.

Repair or replacement as provided under this warranty is Pelican's exclusive prerogative. ANY APPLICABLE IMPLIED WARRANTIES, INCLUDING WARRANTIES OR MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE HEREBY LIMITED TO 5 YEARS FROM THE DATE OF PURCHASE AND ARE SUBJECT TO THE CONDITIONS SET FORTH IN THIS LIMITED WARRANTY. IN NO EVENT SHALL PELICAN BE RESPONSIBLE FOR INCIDENTAL DAMAGES RESULTING FROM THE BREACH OF ANY EXPRESS OR IMPLIED WARRANTIES. This warranty gives you specific legal rights, and you may also have other legal rights, which vary from state to state.

**SILENT
SCOPE**
LIGHT RIFLE

PL-2038

Proof Of Purchase





PELICAN

Performance you can trust™

1840 East 27th Street
Vernon, CA 90058 USA
Phone: 800 331 3844

www.pelicanperformance.com

Pelican and its logo are registered trademarks. Silent Scope Complete™, and the Silent Scope® logos are registered trademarks or trademarks of KONAMI CORPORATION. All rights reserved. Microsoft, Xbox and the Xbox logo are either registered trademarks of Microsoft Corporation in the U.S. and/or in other countries and are used with permission from Microsoft.

XBOX®
COMPATIBLE