

Thank you for purchasing VGA Sniper Scope Light Rifle & Arcade Shot Gun. This product was developed specifically to give you an enhanced gaming experience when playing Silent Scope Complete™. There are a few switches, buttons, and features not found on your basic Xbox Controller. The following is an explanation of these elements.

Dual Functionality:

Sniper Scope Light Rifle was designed to be the ultimate Light Gun Accessory. The Barrel, Scope, and Stock are detachable so that the light Rifle transforms into a Pump Action Shotgun!

Pump Action Reload:

A Pump Action Reload has been added to give you the ultimate game experience when you are using the product in its Shotgun form.

Linear Kickback Function:

Sniper Scope Light Rifle includes a realistic Linear Kickback feature that allows you to feel the recoil of every shot fired!

Scope Sensor:

Silent Scope Complete™ is a light gun compatible game, but to activate the scope you have to press and hold a button when you want to be zoomed in to target your enemy. The Sniper Scope Light Rifle has a feature to activate the scope by just simply moving your head and looking into the scope of the rifle. So once you place your head behind the scope the game automatically has the screen zoomed in as long as you are looking through the scope. If you are not looking into the scope the game will keep the screen normal with no zoom. See below for more information.


Gun Modes:

Sniper Scope Light Rifle includes 4 different gun modes; Normal, Auto Reload, Burst, and Auto Fire / Auto Reload. See below for more information.


Product Layout

Arcade Shotgun (Shotgun Form)


PUMP ACTION SHOTGUN

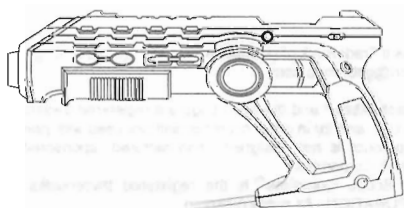

Sniper Scope Light Rifle (Rifle Form)

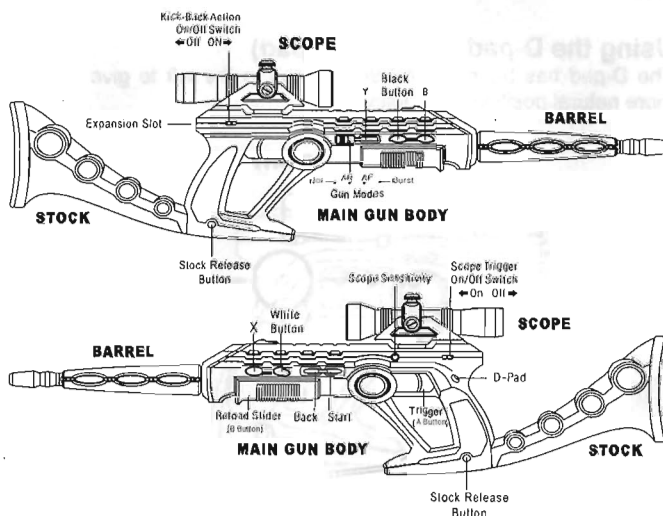

Instructions For Rifle Assembly

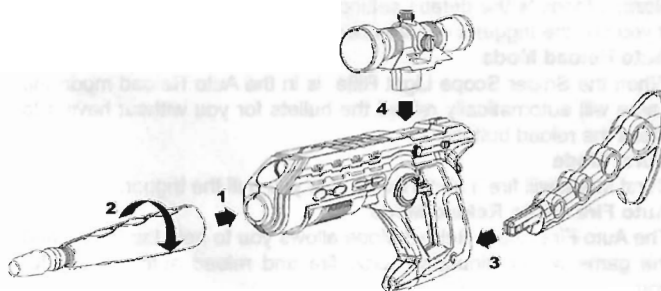

When using the Sniper Scope Light Rifle in its rifle mode there is some easy assembly required.

Below is a brief explanation of how to assemble the rifle:

1. Remove the main gun body and scope from the upper tray of the box.
2. Under the main gun body you will find the barrel and stock.
3. Insert the barrel into the front of the main body, the black bubbles should be facing up. Now rotate the barrel in a clock wise motion. Make sure that the barrel is firmly attached. Please do not apply excessive force.
4. Next locate the hole at the back of the main gun body at the bottom of the handle. Insert the Stock into this hole with the black portion of the stock facing down until you feel a click.

Please do not apply excessive force.

5. The last step of assembly is to attach the scope. You will notice a slot on the top surface of the main gun body, slip open the door. Insert the scope into this slot with the larger diameter end of the scope facing towards the front of the gun.

Shotgun Assembly:

When you want to use the Sniper Scope Light Rifle as a shotgun here is no special assembly required.

NOTE: You must calibrate the light rifle before you attach the scope. For more information please see below.

Disassembling the Rifle:

Below is a brief description on how to disassemble the Sniper Scope Light Rifle :

1. Remove the Scope from the main gun body lifting it straight up.
2. The barrel can be removed by rotating it counter clockwise until it releases.
3. When removing the Stock, place the rifle under your arm upside down with the stock pointing away from you.
4. This will make the bottom of the handle face up towards you. With one of your hands press the release buttons located on each side of the handle with your thumb and index finger.
5. With the release buttons pressed use your other hand to pull the stock straight away from you until it comes out of the main gun body.

Calibration:

When you start Silent Scope Complete™ and have not calibrated your Sniper Scope Light Rifle or any other light gun, a calibration screen will automatically come up.

1. Make sure the Gun Mode is set to normal.
2. Turn the Scope sensor switch to the off position.
3. Aim at the target and pull the trigger.
4. A second target will appear. Aim at the target and pull the trigger again. After you have pulled the trigger at the second target a new screen will come up that has a large black square in the center of the screen.
5. Pan the gun left and right moving the cursor across the black square.
6. If you notice the cursor delay as it moves in and out of the black square, you will need to adjust the brightness up.
7. Press the D-pad right to increase the brightness. Keep adjusting it until the cursor moves smoothly across the black square.
8. Pull the Trigger once you are finished adjusting the brightness.
9. The Sniper Scope Light Rifle is now calibrated.

NOTE: Not all games calibrate the Light Rifle and Shotgun in the same way. If you are having trouble please refer to the game instruction manual for details on Calibration. Make sure you follow steps 1 and 2.

If you have already calibrated a different light gun with Silent Scope Complete™ the calibration is stored in the game save and it will

automatically be loaded.

Follow these steps to recalibrate the game for use with the Sniper Scope Light Rifle :

1. Make sure the Gun Mode is set to "Normal".
2. Turn the Scope sensor switch to the off position.
3. Start the game. Once the game has begun press the Start Button to bring up the menu.
4. Select the Calibration option and the calibration screen will come up.
5. Aim at the target and pull the trigger.
6. A second target will appear. Aim at the target and pull the trigger again. After you have pulled the trigger at the second target a new screen will come up that has a large black square in the center of the screen.
7. Pan the gun left and right moving the cursor across the black square.
8. If you notice the cursor delay as it moves in and out of the black square, you will need to adjust the brightness up.
9. Press the D-pad right to increase the brightness. Keep adjusting it until the cursor moves smoothly across the black square.
10. Pull the Trigger once you are finished adjusting the brightness.
11. The Sniper Scope Light Rifle is now calibrated.

Using the Scope Sensor

The Sniper Scope Light Rifle has the unique ability to activate the scope for Silent Scope Complete™ with just a simple movement of your head. All you have to do is look into the scope and it will be activated automatically for you. Below are a few points to remember when using the Scope Sensor:

On / Off Switch

You can turn the scope sensor on or off with this switch. You should never calibrate the gun with the Scope Sensor on.

Adjusting Scope Sensor

The Sniper Scope Light Rifle gives you the ability to tune the scope to your liking.

NOTE: Do not adjust the Scope Sensor unless you are an advanced user. The default setting will work for most cases.

To adjust the scope sensor follow the steps below:

1. Start Silent Scope Complete™.
2. Make sure the Scope Sensor is in the ON position.
3. Move your head to look through the screen.
4. Slowly turn the Scope Sensor adjustment until you see the scope come up on the software.
5. Pull your head away and then look back into the scope to make sure that the scope on the screen goes up and down.
6. You are now ready to play using the Scope Sensor.


Using the Kick Back Feature

A linear Kickback feature has been added to the Sniper Scope Light Rifle to enhance the gaming experience. The Kickback feature can

be turned on or off via the ON / OFF switch on the right side of the gun.

Using the D-pad (directional pad)

The D-pad has been rotated 90 degrees to the left to give you a more natural position when using it.

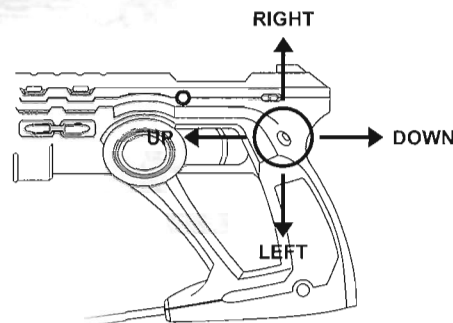

Gun Modes

The Sniper Scope Light Rifle has four different gun modes so you can set up the rifle to your liking.

Normal Mode

Normal Mode is the default setting for the Sniper Scope Light Rifle. If you pull the trigger it will fire once.

Auto Reload Mode

When the Sniper Scope Light Rifle is in the Auto Reload mode the game will automatically reload the bullets for you without having to press the reload button.

Burst Mode

Burst Mode will fire 3 shots every time you pull the trigger.

Auto Fire / Auto Reload Mode

The Auto Fire / Auto Reload Mode allows you to hold the trigger and the game will continuously turbo fire and reload automatically for you.

Trouble Shooting

If you are having difficulties with your Sniper Scope Light Rifle, please refer below:

The Calibration Screen does not come up when I start Silent Scope Complete™.

1. The Xbox® game console has already saved a calibration for a different gun. You can access the calibration while in the game by pressing start.
2. If the gun does not respond and you cannot get into the game, plug a controller into controller port two and start the game. Press the start button on the Sniper Scope Light Rifle to access the calibration screen.

The Screen brightness adjustment screen does not come up while calibrating the gun.

1. Please check to verify that the Scope Sensor is in the OFF position.
2. Please check to verify that the Gun Mode is set to Normal.

The Kickback feature does not work.

1. Check to verify that the Kickback Switch is set to the ON position.

The Scope Sensor is not working.

1. Check to verify that the Scope Sensor is in the ON position.
2. Try adjusting the Scope Sensor. Please see Scope Sensor section for more information.

My Sniper Scope Light Rifle does not respond.

1. Check to verify that the Sniper Scope Light Rifle is plugged into controller port two.
2. Recalibrate the Sniper Scope Light Rifle. Please see more information on calibration section.

VGA is a Trademark of goodbetterbest Ltd., B3 1UG, England.
support@gbbggroup.com

Microsoft, Xbox® and the Xbox Logo are registered trademarks of Microsoft Corporation in the U.S. and /or in other countries and are used with permission from Microsoft. This product is not designed, manufactured, sponsored, endorsed or approved by Microsoft Corporation. Silent Scope Complete™ is the registered trademarks or trademarks of KONAMI CORPORATION. All rights reserved.