 


XK-10 Light Gun

SPC226

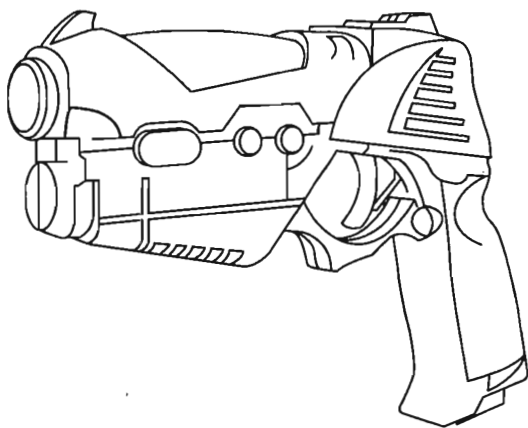

For use with
SONY PlayStation 2™, PSone™ games consoles

INSTRUCTION MANUAL

Thank you for purchasing the 4GAMERS Light Gun for the PS2, PSone & Playstation Games Consoles. This product has been designed to enhance your PS2, PSone & Playstation Games Consoles.

Please keep this instruction manual for future reference, if you require any assistance or help please contact:

Tel. 0905 710 0010

(Please note this is a premium rate number
and all calls will be charged at 30 pence per minute. All callers must be over 16 yrs of
age permission must be obtained from the person paying the bill. Parental supervision is recommended.)

Email. Help@4gamers.net

Warranty

This product bearing the 4Gamers trademark, is guaranteed by the manufacturer for a period of one year from the date of purchase, and will, during this period be replaced with the same or a similar model, at our option, free of charge, if there is a defect due to faulty material, or workmanship. This guarantee does not cover defects arising from accidental damage, misuse or wear and tear, and is available only to the original purchaser of the product. This does not affect your statutory rights.

Box Contents

 
- 1 x Light Gun
- 1 x Guncon Adaptor
- 1 x instruction manual

Features

- USB & Gameport Connection
- Auto Fire & Auto Reload mode
- Auto Reload mode
- Normal, Guncon 1 & Guncon 2 Modes
- D-Pad


BUTTON CONFIGURATION

Button Configuration

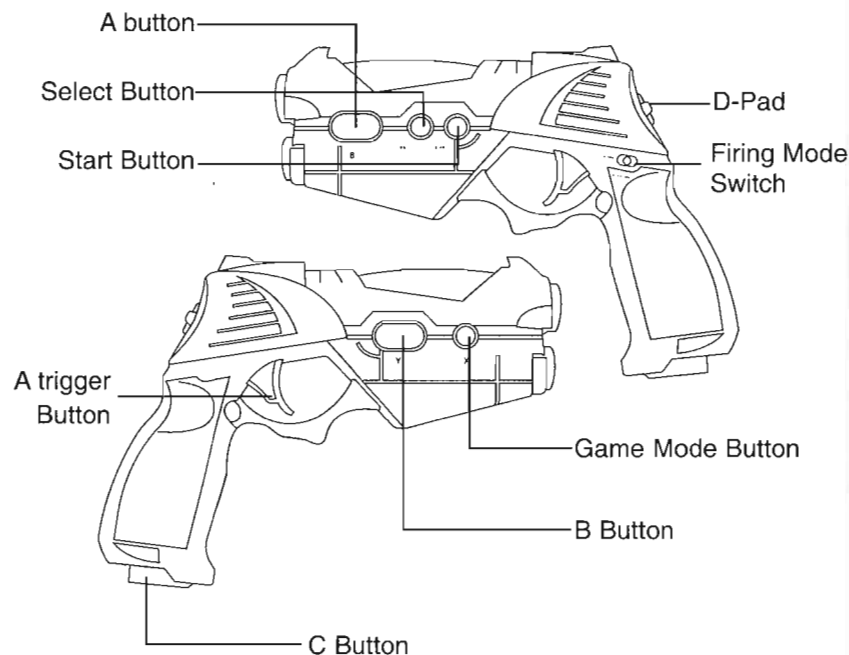

CONNECTION

 Connection

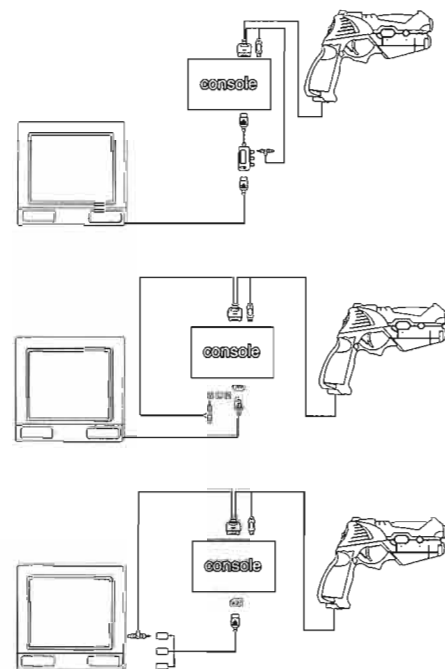

1. Ensure that your PS2 console is switched off.
2. Check with the game's instructions to confirm which mode is required, Normal, Guncon 1 or Guncon 2.
3. Plug the gun into the controller port or USB port as recommended in your game
4. Connect the yellow video plug and Guncon Adaptor as per the Connection diagrams.
5. Turn on your PS2 console

Note: The USB connection is only applicable for Guncon 2 mode.

Firing Mode Button**1. Normal**

This mode allows you to fire a single shot every time you pull the trigger.

2. Auto Reload

This mode will automatically reload your bullets.

3. Auto Fire & Reload

This is a combination of auto reload and auto fire. By simply holding the trigger the gun will fire continuously until all your bullets are used and the gun will then auto reload.

Note: Auto reload will reload your gun after 6 shots have been fired.

Vibration Action

The XK-10 Light Gun incorporates recoil vibration, which is activated when the trigger is pulled to give a vibration effect.

Mode Button**NORMAL**

Used for Playstation/PSone games
Buttons used A (special), B (Start) & Fire

GUNCON 1

Used for Playstation/PSone and NAMCO games
Buttons used A, B & Fire

GUNCON 2

Used for PS2 and NAMCO games
Buttons used A, B, C, Start, Select, Fire & D-Pad

Note: If the wrong mode is selected the gun will not be detected by the console and will not function.

D-Pad

The Lightgun is equipped with a D-Pad, which will provide menu selection, and in game movements with compatible games

Important Notes

To ensure that your Lightgun works accurately and correctly please follow the points below:

- Adjust the brightness level on your TV to a higher setting
- Ensure that your TV screen is clean
- Turn off any lights near the TV
- If there is a window behind your TV close the curtains or blinds
- For Optimum use we recommend that you do not use the Lightgun further than 2 metres away from the TV screen
- The Lightgun is not suitable for use with the following types of TV:
LCD (liquid crystal display) Screens
Projection TV
100 Hz TV
Plasma Screens

Warning

- Although this Gun is completely harmless NEVER point the gun at anyone
- DO NOT remove the connection cables to make the light gun look like a real weapon.
- If the Light gun is mistaken for a real weapon, you may cause harm to yourself or others.

Important Safeguards & Precautions

1. This Unit is for indoor use only. Never expose to direct sunlight or wet weather conditions.
2. Do not expose the unit to splashing, dripping, rain or moisture. Do not immerse in liquid.
3. Do not expose to dust, high humidity, high temperatures or mechanical shock.
4. Do not position the cable where it would be subjected to extreme heat or flames. Keep the cable away from oil or sharp objects.
5. Avoid any unnecessary strain of the cable.
6. Never carry the unit by the cable.
7. Do not use if the equipment is damaged.
8. Do not disassemble; there are no serviceable parts inside.
9. For external cleaning, use a soft, clean, damp cloth only. Use of detergents may damage the cabinet finish and leak inside.
10. Do not connect or disconnect the gun while the games console is turned on.

Important Notice

1. If at any time whilst using this product you feel pain, weakness, numbness or tingling in your hands, wrists, elbows or shoulders we recommend that you cease using it until these symptoms subside.
2. We recommend that you take frequent breaks of fifteen minutes every hour & hold the gun with a light grip while playing a game.

SUGGESTED GUN SETUPS

Time Crisis 1

1. Connect the gun into controller port number 1 ensuring that the yellow video plug is connected to your TV
2. Set the Mode Switch to "Guncon 1"
3. Load the game as detailed in the Game instructions and follow the on-screen calibration set-up

Time Crisis 2

1. Connect the gun into the PS2's upper USB socket ensuring that the yellow video plug is connected to your TV
2. Set the Mode Switch to "Guncon 2"
3. Load the game as detailed in the Game instructions and follow the on-screen calibration set-up
4. Use the D-Pad for menu selection

Dino Stalker

1. Connect the gun into the PS2's upper USB socket ensuring that the yellow video plug is connected to your TV
2. Set the Mode Switch to "Guncon 2"
3. Load the game as detailed in the Game instructions and follow the on-screen calibration set-up
4. Use the D-Pad to control movement within the game

Vampire Night

1. Connect the gun into the PS2's upper USB socket ensuring that the yellow video plug is connected to your TV
2. Set the Mode Switch to "Guncon 2"
3. Load the game as detailed in the Game instructions and follow the on-screen calibration set-up

Endgame

1. Connect the gun into the PS2's lower USB socket ensuring that the yellow video plug is connected to your TV
2. Set the Mode Switch to "Guncon 2"
3. Load the game as detailed in the Game instructions and follow the on-screen calibration set-up

SUGGESTED GUN SETUPS

Resident Evil Survivor

1. Ensure that the gun is connected into controller port number 1 ensuring that the yellow video plug is connected to your TV
2. Set the Mode Switch to "Guncon 1"
3. Load the game as detailed in the Game instructions and follow the on-screen calibration set-up

Resident Evil Survivor 2 – Code Veronica

1. Connect the gun into the PS2's upper USB socket ensuring that the yellow video plug is connected to your TV
2. Set the Mode Switch to "Guncon 2"
3. Set Auto Reload/Auto Fire to Normal
4. Load the game as detailed in the Game instructions and follow the on-screen calibration set-up
5. Use the D-Pad to control movement within the game

Die Hard Trilogy

1. Ensure that the gun is connected into controller port number 1.
2. Set the Mode Switch to "Normal"
3. Load the game as detailed in the Game instructions

Note: Only the Die Harder section of this game is compatible with the Lightgun

Die Hard Trilogy 2

1. Ensure that the gun is connected into controller port number 2 and a normal control pad is connected into controller port number 1
2. This game can be played in either "Guncon 1" or "Normal" mode, if using Guncon mode the yellow video plug must be connected to your TV
3. Load the game as detailed in the Game instructions

Police 24/7

1. Connect the gun into the PS2's upper USB socket and Gameport 1, connect a normal control pad into controller port number 2
2. Set the Mode Switch to "Normal"
3. Load the game as detailed in the Game instructions

If your game is not listed above please read its instruction manual carefully or contact the 4Gamers Helpline team for advice on connection and set-up.

Helpline Information

OPEN: 08:00am till 10:00pm, 7 days a week

(excl: Christmas/Boxing/New Years Day.)

Tel: 0905 710 0010

(All calls charged at 30 pence per minute. All callers must be over 16 yrs of age permission must be obtained from the person paying the bill. Parental supervision is recommended.)

Email. Help@4gamers.net



Sony PlayStation 2™, PS2™ and PSone are trademarks of Sony Computer Entertainment Co.
This product is not sponsored, endorsed or approved by SONY.

Not suitable for children under the age of 8



Due to the Company's policy of constant improvement and technical refinement, the Company reserves the right to change or alter specification.