

4gamers
THE OFFICIAL OPTION

Walther P99 Light Gun



FOR USE WITH
PS2, PSONE & PLAYSTATION
GAMES CONSOLES

SPC211

INSTRUCTION MANUAL

Thank you for purchasing the 4GAMERS Walther P99 Light Gun for the PS2, PSone & Playstation Games Consoles
This product has been designed to enhance your PS2, PSone & Playstation Games Consoles.

Please keep this instruction manual for future reference, if you require any assistance or help please feel free to contact our Helpline on **0870 241 5014** (calls charged at National call rate) or email **help@4gamers.net**

Features

Officially Licensed by Walther
White Dot - Virtual Pointer
Auto Reload & Auto Fire + Reload
Normal, Guncon 1 and 2 and modes
D-Pad Feature
Handgrip reload button
USB Connection

Box Contents

 
1 x Walther P99 Light Gun
1 x RGB Adaptor
1 x Phono to Phono Cable
1 x instruction manual

Warranty

This product bearing the 4Gamers trademark, is guaranteed by the manufacturer against any defects due to faulty material or workmanship at any time after purchase, and we promise to replace it with the same or a similar model, at our option free of charge, on production of a receipt or other proof of purchase. This guarantee does not cover defects arising from accidental damage, misuse or wear and tear, and is available only to the original purchaser of the product. This does not affect your statutory rights.

Button Configuration


Functions (Normal, Auto Reload, Auto Fire & Auto Reload)

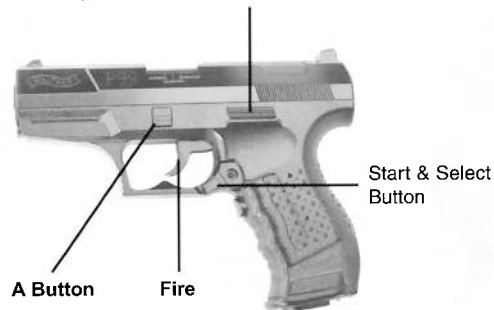



Modes (Normal, Guncon 1 & Guncon 2)



 Button Configuration

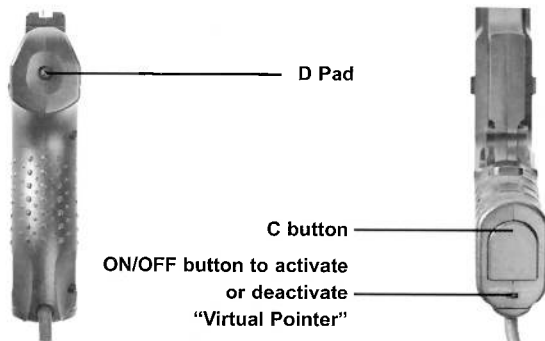

Connection Diagrams

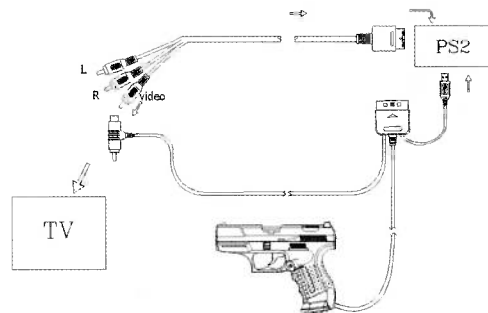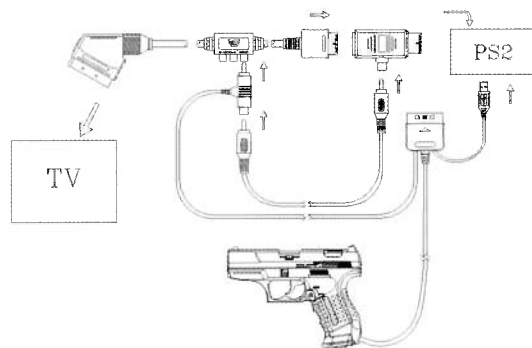  

Connection

Ensure that your PS2 console is switched off.

Check with the games instructions to confirm which mode is required, Normal, Guncon 1 or Guncon 2.

1. Plug the gun into the controller port or USB port recommended in your game
2. Connect the yellow video plug and RGB adaptor as per the Connection diagrams.
3. Turn on your PS2 console

Note: The USB connection is only applicable for Guncon 2 mode.

White Dot Virtual Pointer

The gun incorporates a White Dot Virtual Pointer, which transmits a white dot onto your TV screen for accurate aiming.

To enable the whit dot function set the Virtual Pointer switch to "ON". To disable this function set the switch to "OFF".

Vibration

The vibration function will activate whenever the trigger is pulled.

Note: The vibration feature cannot be deactivated.

Directional Controller (D-Pad)

The gun incorporates a Directional Controller (D-Pad), which allows for in game movements and menu selection and is dependent upon the game being played.

Firing Functions Switch

1. Normal

This mode allows you to fire a single shot every time you pull the trigger.

2. Auto Reload

This mode will automatically reload when all the bullets have been fired.

3. Auto Reload & Auto Fire

This mode will fire all the bullets continuously then automatically reload.

Mode Switch

The mode selection switch is adjusted by sliding the inner gun barrel backwards or forwards. You must select the correct mode for the type of game you are playing, either "NORMAL", "GUNCON 1" or "GUNCON 2" please see your game instruction manual.

NORMAL

Used for Playstation/PSone games Buttons used A (special), B (Start) & FIRE

GUNCON

Used for Playstation/PSone and NAMCO games Buttons used A, B & Fire

GUNCON 2

Used for PS2 and NAMCO games Buttons used A, B, C, Start, Select, Fire & D-Pad

Note: If the wrong mode is selected the gun will not be detected by the console and will not function.

Important Notes

To ensure that your Lightgun works accurately and correctly please follow the points below:

- Adjust the brightness level on your TV to a higher setting
- Ensure that your TV screen is clean
- Turn off any lights near the TV
- For Optimum use we recommend that you do not use the Lightgun further than 2 metres away from the TV screen
- The Lightgun is not suitable for use with the following types of TV:
LCD (liquid crystal display) Screens
Projection TV
100 Hz TV
Plasma Screens

Warning

- Although this Gun is completely harmless NEVER point the gun at anyone
- DO NOT remove the connection cables to make the light gun look like a real weapon.
- If the Light gun is mistaken for a real weapon, you may cause harm to yourself or others.

Important Safeguards & Precautions

1. This Unit is for indoor use only. Never expose to direct sunlight or wet weather conditions.
2. Do not expose the unit to splashing, dripping, rain or moisture. Do not immerse in liquid.
3. Do not expose to dust, high humidity, high temperatures or mechanical shock.
4. Avoid any unnecessary strain of the cable.
5. Never carry the unit by the cable.
6. Do not use if the equipment is damaged.
7. Do not disassemble; there are no serviceable parts inside.
8. For external cleaning, use a soft, clean, damp cloth only. Use of detergents may damage the cabinet finish and leak inside.
9. Do not connect or disconnect the gun while the games console is turned on.

Important Notice

1. If at any time whilst using this product you feel pain, weakness, numbness or tingling in your hands, wrists, elbows or shoulders we recommend that you cease using it until these symptoms subside.
2. We recommend that you take a fifteen minute break every hour & hold the gun with a light grip while playing a game.
3. Adult supervision is recommended.

Suggested Gun Setup for:

Time Crisis 1

1. Connect the gun into controller port number 1 ensuring that the yellow video plug is plugged in
2. Set the Mode Switch to "Guncon"
3. Load the game as detailed in the Game instructions and follow the on-screen calibration set-up

Time Crisis 2

1. Connect the gun into the PS2's upper USB socket ensuring that the yellow video plug is connected
2. Set the Mode Switch to "Guncon 2"
3. Load the game as detailed in the Game instructions and follow the on-screen calibration set-up
4. Use the D-Pad for menu selection

Endgame

1. Connect the gun into the PS2's lower USB socket ensuring that the yellow video plug is connected
2. Set the Mode Switch to "Guncon 2"
3. Load the game as detailed in the Game instructions and follow the on-screen calibration set-up

Resident Evil Survivor

1. Ensure that the gun is connected into controller port number 1 ensuring that the yellow video plug is plugged in
2. Set the Mode Switch to "Guncon"
3. Load the game as detailed in the Game instructions and follow the on-screen calibration set-up

Resident Evil Survivor 2 – Code Veronica

1. Connect the gun into the PS2's upper USB socket ensuring that the yellow video plug is connected
2. Set the Mode Switch to "Guncon 2"
3. Set Auto Reload/Auto Fire to Normal
4. Load the game as detailed in the Game instructions and follow the on-screen calibration set-up
5. Use the D-Pad to control movement within the game

Suggested Gun Setup for:

Dino Stalker

1. Connect the gun into the PS2's upper USB socket ensuring that the yellow video plug is connected
2. Set the Mode Switch to "Guncon 2"
3. Load the game as detailed in the Game instructions and follow the on-screen calibration set-up
4. Use the D-Pad to control movement within the game

Vampire Night

1. Connect the gun into the PS2's upper USB socket ensuring that the yellow video plug is connected
2. Set the Mode Switch to "Guncon 2"
3. Load the game as detailed in the Game instructions and follow the on-screen calibration set-up

Die Hard Trilogy

1. Ensure that the gun is connected into controller port number 1 and a normal control pad is connected into controller port number 2
2. Set the Mode Switch to "Normal"
3. Load the game as detailed in the Game instructions

Die Hard Trilogy 2

1. Ensure that the gun is connected into controller port number 2 and a normal control pad is connected into controller port number 1
2. This game can be played in either Guncon or Normal mode, if using Guncon mode the yellow video plug must be plugged in
3. Load the game as detailed in the Game instructions

Police 24/7

1. Connect the gun into the PS2's upper USB socket and Gameport
2. Connect a normal control pad into controller port number 2
3. Set the Mode Switch to "Normal"
4. Load the game as detailed in the Game instructions

If your game is not listed above, please read its instruction manual carefully or contact the 4Gamers Helpline team for advice on connection and setup.

Helpline Information

Monday to Friday 9:00 am - 5:00 pm

Tel. 0870 241 5014

Fax. 0870 750 6702

(Calls charged at the national rate)

Email. Help@4gamers.net

www.4gamers.net

Sony PlayStation 2™ and PS2™ are trademarks of Sony Computer Entertainment Co.
This product is not sponsored, endorsed or approved by SONY.