

IMPORTANT!

GAMESTER LIGHT GUN PROGRAMMING FEATURE:

It is possible to adjust the number of shots that the gun will reload after in AR or AR+AF mode.

Switch to either AR or AR+AF mode. Hold down the B key and press the A key the number of times you need between reload. Then Release the B key to set this number.

The Default Reload setting is after 6 shots.

(Please Also note the reload and auto reload function only works for the A and B buttons when in guncon 2 mode.)