 


XK-21 Light Gun

SPC210

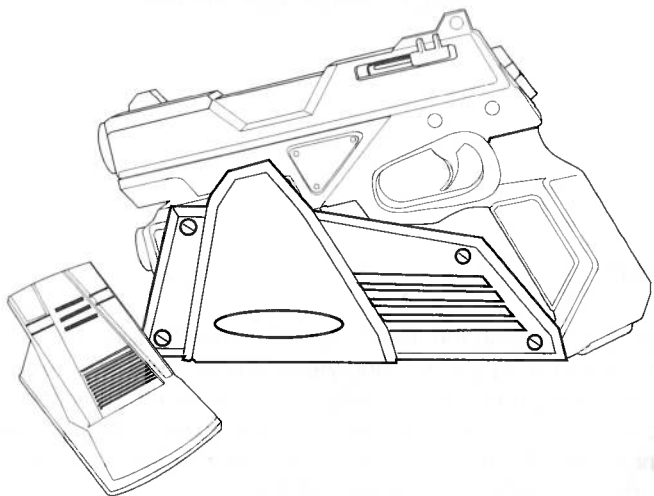

For use with
SONY PlayStation 2™, PSone™ and PlayStation™
games consoles

INSTRUCTION MANUAL

INTRODUCTION

Thank you for purchasing the 4gamers XK-21 Light Gun for the PS2, PSone and PlayStation games consoles. This product has been designed to enhance your PS2, PSone & PlayStation games consoles.

Please keep this instruction manual for future reference. If you require any assistance please feel free to contact our Helpline:

Tel. 0870 241 5014

Email. help@4gamers.net

Warranty

This product, bearing the 4gamers trademark, is guaranteed by the manufacturer for a period of one year from the date of purchase and will, during this period, be replaced with the same or a similar model, at our option, free of charge, if there is a defect due to faulty material or workmanship. This guarantee does not cover defects arising from accidental damage, misuse, or wear and tear, and is available only to the original purchaser of the product. This does not affect your statutory rights.

CONTENTS

 
Box Contents

- 1 x XK-21 Light Gun
- 1 x Gun Stand
- 1 x Guncon™ Adaptor
- 1 x Reload Pedal
- 1 x instruction manual

Features


- Recoil Action
- Auto Fire & Reload
- Machine Gun Mode
- Guncon 2™ compatible
- Handgrip Reload Button
- Reload Pedal

BUTTON CONFIGURATION

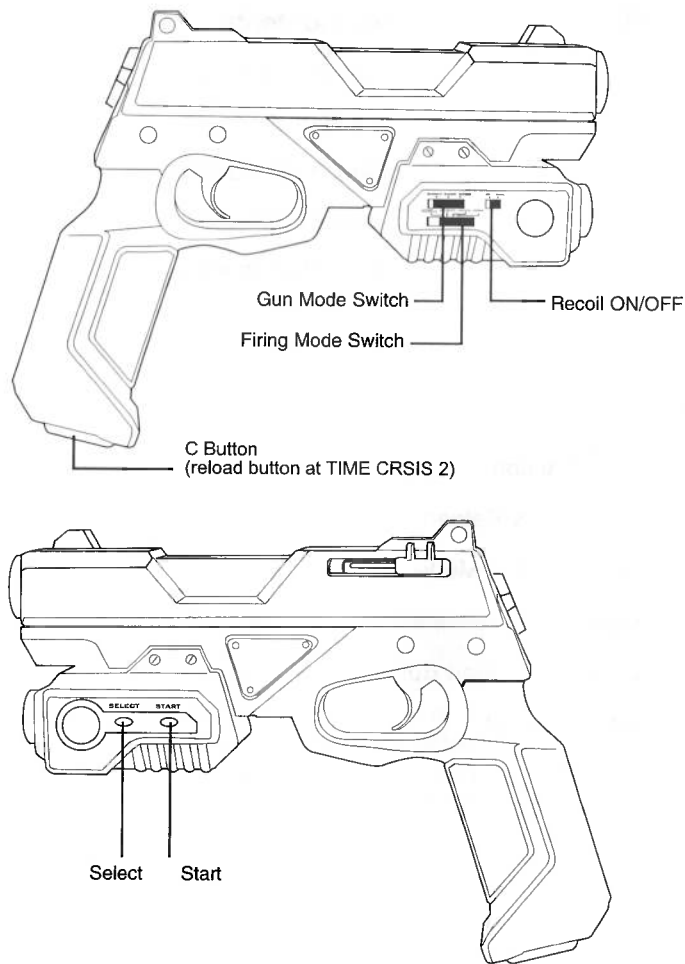

CONNECTION

 Connection

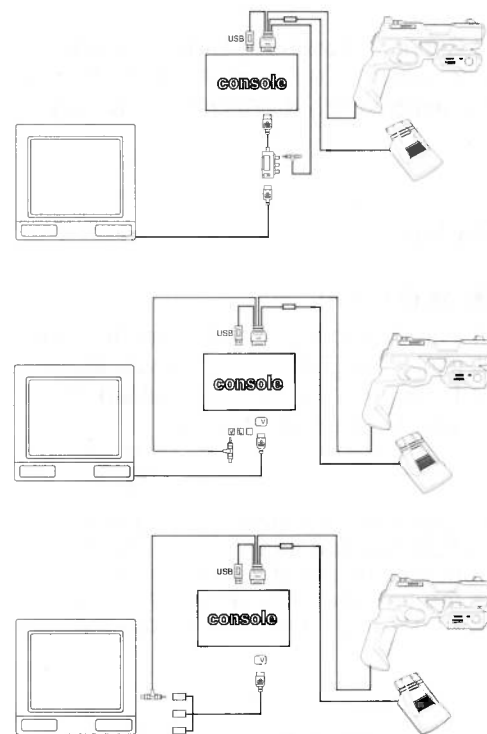

1. Ensure that your PS2™ console is switched of.
2. Plug the gun into the controller port recommended in your game.
3. Connect the yellow video plug as per the diagrams above.
4. Turn on your PS2™ console.

Recoil Action

The XK-21 Light Gun incorporates recoil action, which is activated when the trigger is pulled to give a recoil effect. To enable this function, set the recoil effect switch to "Recoil". To disable this function set the switch to "Off".

Firing Mode Switch

Machine Gun Mode (AF+AR)

This is a combination of auto fire and auto reload. Constant depression of the trigger will cause the gun to fire continuously until the magazine has been emptied. The gun will then auto reload (to set the number of rounds between reloads see **Auto Reload**).

Auto Reload

This mode allows the gun to reload the bullets automatically. (to set the numbers of reload bullet, you need to hold the B-button first, without releasing the B-button, press and release the A-button. The number of reload bullets is the time that A-button being pressed(the maximum numbers of reload bullet depending on the game required.)

Auto Fire

This mode allows you to press and hold the trigger for rapid firing.

Normal

This mode allows you to fire a single shot every time you pull yhe trigger.

Gun Mode Switch

You must select the correct mode for the type of game you are playing, either "Guncon 2™", "Guncon™" or "PSX"; please see your game's instruction manual. Normally, games by NAMCO will use the "Guncon 2™" and "Guncon™" mode.

Note: If you use the wrong mode, the gun will not be detected by the console.

Reload Pedal

The reload pedal can be used to reload the bullets in your gun by simply pressing and releasing the pedal with your foot.

GUN SET-UP

Please follow the suggested gun set-up below for the following popular games:

Time Crisis™, Time Crisis 2™ and other NAMCO™ compatible games

1. Connect the gun as explained in the "Connection" section of this manual, ensuring that the yellow video plug is plugged in.
2. Set the Mode Switch to "Guncon™" for Time Crisis™ and "Guncon 2™" for Time Crisis 2™.
3. Set Auto Reload/Auto Fire to Normal.
4. Load the game as detailed in the game's instructions and follow the on-screen calibration set-up.

Resident Evil Survivor™

1. Connect the gun as explained in the "Connection" section of this manual, ensuring that the yellow video plug is plugged in.
2. Set the Mode Switch to "Guncon™".
3. Set Auto Reload & Auto Fire to Normal.
4. Adjust the TV brightness to a higher setting.
5. Load the game as detailed in the game's instructions and follow the on-screen calibration set-up.

Die Hard Trilogy™

1. Connect the gun as explained in the "Connection" section of this manual. You do not need to plug in the yellow video plug.
2. Set the Mode Switch to "PSX".
3. Set Auto Reload/Auto Fire to Normal.
4. Load the game as detailed in the game's instructions.

GUN SET-UP

Die Hard Trilogy 2™

1. Ensure that the gun is connected into controller port number 2 and a standard controller pad is connected into controller port number 1.
2. This game can be played in either "Guncon™" or PSX mode. If using "Guncon™" mode the yellow video plug must be plugged in.
3. Set Auto Reload/Auto Fire to Normal.
4. Load the game as detailed in the game's instructions.

Important Notes

To ensure that your XK-21 Light Gun works accurately and correctly please follow the points below:

- (a) Adjust the brightness level on your TV to a higher setting
- (b) Ensure that your TV screen is clean
- (c) Turn off any lights near the TV
- (d) Position the XK-21 Light Gun approximately 2 metres away from the TV screen

The XK-21 Light Gun may not function correctly with the following types of TV:

- LCD (liquid crystal display) screens
- Projection TV's
- 100 Hz TV's
- Plasma screens

Important Safeguards and Precautions

1. This unit is for indoor use only. Never expose to direct sunlight or wet weather conditions.
2. Do not expose the unit to splashing, dripping, rain or moisture. Do not immerse in liquid.
3. Do not expose to dust, high humidity, high temperatures or mechanical shock.
4. Avoid any unnecessary strain of the cable.
5. Never carry the unit by the cable.
6. Do not use if the equipment is damaged.
7. Do not disassemble; there are no serviceable parts inside.
8. For external cleaning use a soft, clean, damp cloth only. Use of detergents may damage the cabinet finish and leak inside.
9. Do not connect or disconnect the gun whilst the games console is turned on.

Important Notice

- Although this gun is completely harmless, you should NEVER point the gun at anyone.
- DO NOT repaint the XK-21 Light Gun to look like a real weapon.
- If the XK-21 Light Gun is mistaken for a real weapon, you may cause harm to yourself or others.

Warning

- If at any time whilst using this product you feel pain, weakness, numbness or tingling in your hands, wrists, elbows or shoulders we recommend that you cease using it until these symptoms subside.
- We recommend that you take frequent breaks of fifteen minutes every hour and hold the gun with a light grip whilst playing a game.

Helpline Information

Monday to Friday 9:00 am - 5:00 pm

Tel. 0870 241 5014

Fax. 0870 750 6702

Email. Help@4gamers.net

www.4gamers.net

Sony PlayStation 2™, PS2™, PSone™ and PlayStation™ are trademarks of Sony Computer Entertainment Co.

Guncon™ and Namco™ are trademarks of Namco Ltd.

Die Hard Trilogy™ and Die Hard Trilogy 2™ are trademarks of Twentieth Century Fox Film Corporation.

Resident Evil Survivor™ is a trademark of Capcom Co. Ltd.

This product is not sponsored, endorsed or approved by any of the trademark owners above.



Due to the Company's policy of constant improvement and technical refinement, the Company reserves the right to change or alter specification.