

I N S T R U C T I O N S **NUBY**
PRO-LINE™

THE HEATER™



NB-280

THE HEATER™ by Nuby

Licensed by Sony

INTRODUCTION

Thank you for purchasing The HEATER™ Gun, the ultimate shooting device for PlayStation™. Before operating, thoroughly familiarize yourself with this manual, so that you can understand the functions completely.

WARNING


- Although The HEATER™ is harmless, and is only a toy, DO NOT point the Gun at anyone, at any time. If The HEATER™ is mistaken for a real weapon, you can get hurt or worse.
- Do not repaint The HEATER™. The HEATER™ has been colored to make sure it is NOT mistaken for a real weapon.

NOTE 1: The HEATER™ is NOT Guncon™ compatible. A Light Gun Foot Pedal (#001398) for The HEATER™ is now available for an optional accessory. It will make The HEATER™ Guncon™ compatible for use with Namco gun games (see Guncon™ logo on back of CD game case to identify if it is a Guncon™ game). Please check the insert leaflet and contact the dealer for more detail!

FEATURES

- Compatible with PlayStation™ Game Console (NOT Guncon™ compatible).
- Combined auto fire and auto reload (machine gun mode)
- Single shot mode and auto reload mode
- Start, pause and auxiliary weapons buttons
- Three speeds of auto fire
- Three speeds of auto reload software timing
- Three speeds for manual reload button software timing
- Manual reload button
- Set mode for preset number of bullets from 1 to 15

ANATOMY OF THE HEATER™

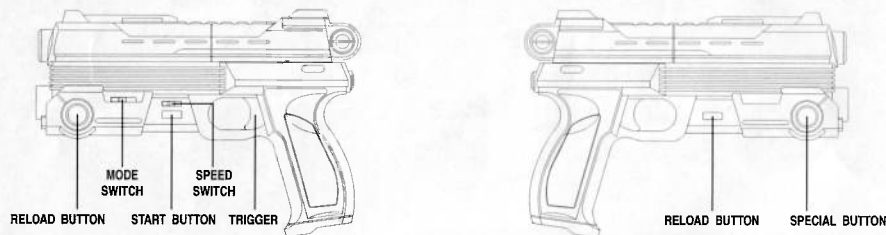

STARTING UP/CONNECTION

Turn the power to your PlayStation™ off before plugging in the HEATER™. Connect the PlayStation™ end of the connector to your PlayStation™.

IMPORTANT: The only way the HEATER™ will function properly in port 2 at the PlayStation™, is to have a controller or second gun in port 1 while port 2 is in use. The HEATER™ is NOT designed for use with the PlayStation™ 4 player Multi tap.

USING THE HEATER

- The START Button can be used to start the game, and also to PAUSE the game at any stage.
- The Trigger is used to fire the HEATER™, and to select options on the software option screen.
- Stand directly in front of and facing the television / monitor when using the HEATER™. Aiming at the screen from an angle may cause the HEATER™ to malfunction, or result in poor game scores.
- Be sure that you adjust your television / monitor to a brighter setting.

CALIBRATION

You may have to calibrate your Gun each time at the start of the game. Follow the game instructions to calibrate The HEATER™. It is essential to calibrate The HEATER™ to the game software. Calibration is important in order to adjust the Gun sensors to the user height and firing position. Some software may not offer this calibration facility, resulting in possible shooting accuracy. This is NOT a fault of The HEATER™.

THE HEATER™ CONTROLS

SET MODE: This mode is to pre-set the number of bullets to be loaded each time during game play. Pull the trigger once to set one bullet (Ranging from 1 to 15 bullets, default setting is 6 bullets, but can be more or less depending on the software). After pre-setting is finished, the MODE switch MUST be moved from the SET position, otherwise the gun would not operate properly.

NORMAL MODE: This is the basic mode of The HEATER™, providing single fire and manual bullet reloading features.

AUTO RELOAD MODE: This mode provides an automatic bullet-reloading feature. When you finish the bullets during a game, this feature can reload the bullets without having to press the manual reload button or point the gun off the screen.

AUTO FIRE + AUTO RELOAD MODE: Auto fire + auto reload mode provides auto fire control and automatic bullet reloading. Slide the MODE switch to AF+AR position to activate the machine gun mode.

NOTE 2: Some games may require speed adjustment to operate properly in the AUTO RELOAD mode and AUTO FIRE + AUTO RELOAD machine gun mode. You should adjust the SPEED switch to activate this function properly.

SPEED SELECTION: Three modes of speed can be selected, the speed of bullet fire and reload timing will be faster if you slide the SPEED switch to the right. The speed selection effect the following functions:

1. Bullet fire speed when using Auto Fire + Auto Reload (AF+AR) mode.
2. Reload timing, when using reload button in manual reload mode.
3. Reload timing, when using Auto Reload mode and the combined AF + AR mode (machine gun mode).

RELOAD BUTTON: The HEATER™ provides two manual reload buttons (one on left and one on the right penal), these buttons provides a manual bullet reload function. Slide the SPEED selection to an appropriate position for correct timing.

SPECIAL BUTTON: On some games you may use this button for launching other weapons.

NOTE 3: When 2 HEATER™ guns are used with the PlayStation™, it is not possible for both guns to fire simultaneously. When one of the guns is being fired, the other gun will be disabled. This is especially noticeable when the Autofire mode is activated. This is not a fault with the Gun, but a characteristic of the PlayStation™.

TROUBLESHOOTING TIPS

If you have any problems with The HEATER™, please check the following items:

If the gun does not respond.

- Be sure the gun is securely connected to the game console.
- Be sure that the Function switch is not in the SET position.
- Be sure that the Television / Monitor screen is located away from sun light.

No effect when you pull the Trigger

- Adjust the television / monitor to a brighter setting.
- Is your television / monitor screen incompatible with The HEATER™? See 'NOTE 4' for an explanation of incompatible televisions / monitors.
- Is there a fluorescent light near your screen? Move fluorescent lights so they do not reflect on the television / monitor screen.

Parts of the television / monitor screen do not register hits. The targeting is off.

- Adjust the television / monitor to a brighter setting.
- Move to a position about 2 meters from the screen.
- Clean the screen.
- Is there a fluorescent light near your screen? Move fluorescent lights so they do not reflect on the screen.
- Are you standing directly in front of and facing the screen?

NOTE 4

You may have problems when using The HEATER™ with the following televisions

- Televisions which have Strobe or Split Screen functions in use.
- Televisions with a dark or dirty screen (set the brightness / contrast, or clean the screen to solve the problem).
- Television which have auto UV filter or brightness adjust functions in use.

FCC Advisory Statement

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed or used in accordance with the instruction, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off an on, the user is encouraged to try to correct the interference by one of more of the following measures:

- * Reorient or relocate the receiving antenna.
- * Increase the separation between the equipment and the receiver is connected.
- * Consult the dealer or an experienced radio / TV technician for help.
- * Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Where shielded interference cables have been provided with the product or specified additional components or accessories elsewhere defined to be used with the installation of the products; they must be used in order to ensure compliance with FCC regulations.

The logo for Nuby, featuring the word "NUBY" in a stylized, italicized, sans-serif font. The letters are outlined with a thick border, giving it a three-dimensional appearance. A small registered trademark symbol (®) is located to the right of the word.

© 1998 Nuby Holdings Corporation

Peterborough, NH 03458

All rights reserved

603-924-2260

info@nubyonline.com

www.nubyonline.com